

**ADDING CLAVOS TO YOUR DOOR**

Clavos are shipped loose in order to be attached **AFTER** your door has been finished or painted.

*Clavo nails can be trimmed / shortened for various panel thicknesses with a Hack-Saw if required.


Attaching Clavos:

Determine where on your door that you would like to attach your clavos; typically they are centered in the middle of two vertical lines (planks, v-grooves or stiles in the door). Using the Tape Measure, measure to the center of each area that you would like to place the clavo & mark with a small X. Pre-drill into the door or panel a minimum of 1/2" in the center of the X. Place the point of the clavo into the pre-drilled hole. *Please make sure to not drill through the entire door or panel. Measure First!*

Place the folded rag or other fabric item over the clavo to protect the finish of the clavo and door. Carefully hammer the clavo with Rubber Mallet straight into the door or panel, until the head of the clavo is flush with the surface of the wood. Repeat process on remaining clavos.

Tools Required:

- Pencil
- Tape Measure
- Drill w/ 3/32" Drill Bit
- Rubber Mallet
- Rag or Other Fabric Item

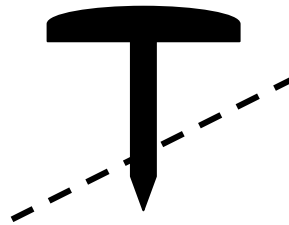

Clavo nails can be trimmed / shortened for various panel thicknesses with a Hack-Saw if required. Cut at an angle.

**ADDING CLAVOS TO YOUR DOOR**

Clavos are shipped loose in order to be attached **AFTER** your door has been finished or painted.

*Clavo nails can be trimmed / shortened for various panel thicknesses with a Hack-Saw if required.


Attaching Clavos:

Determine where on your door that you would like to attach your clavos; typically they are centered in the middle of two vertical lines (planks, v-grooves or stiles in the door). Using the Tape Measure, measure to the center of each area that you would like to place the clavo & mark with a small X. Pre-drill into the door or panel a minimum of 1/4" in the center of the X. Place the point of the clavo into the pre-drilled hole. *Please make sure to not drill through the entire door or panel.*

Place the folded rag or other fabric item over the clavo to protect the finish of the clavo and door. Carefully hammer the clavo with Rubber Mallet straight into the door or panel, until the head of the clavo is flush with the surface of the wood. Repeat process on remaining clavos.

Tools Required:

- Pencil
- Tape Measure
- Drill w/ 3/32" Drill Bit
- Rubber Mallet
- Rag or Other Fabric Item

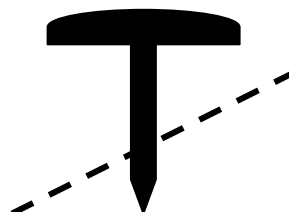

Clavo nails can be trimmed / shortened for various panel thicknesses with a Hack-Saw if required. Cut at an angle.