




Dentil Shelf Installation Instructions:

PL PREMIUM Construction Adhesive Recommended

- Surface temperatures above 40 degrees Fahrenheit or 5 degrees Celsius are recommended.
- Surfaces must be completely dry, free of moisture and clean. With a pencil, mark the height and width location of placement of Dentil Shelf.
- **PL Premium Adhesive** (sold separately) comes ready to use. Do not open cartridges until preparatory work has been completed. Cut nozzle to desired size opening. Place the cartridge in caulking gun and puncture the seal inside the nozzle.
- Apply the **PL Premium Adhesive** with a steady pressure to the back of the Dentil Shelf. (Do not apply adhesive to the door) Spread adhesive bead in a thin layer approximately 1/16" or thinner over the back surface, leaving a 1/4" area around the outer perimeter of the Dentil Shelf. When working on rough surfaces, use enough adhesive to fill gaps. Remove any excess adhesive that may cause squeeze out when applied.
- Bond the Dentil Shelf to the pre-marked door surface location using clamps or mechanical fasteners to hold the Dentil Shelf in place until the adhesive has set. (12 hours) The shelf will be repositionable for approximately 45 minutes.
- Brads or finish nails may be used to help hold the shelf in position while the adhesive sets.
- Support is required until the adhesive has set. Setting time may vary depending on the % of humidity during the curing period and the temperature.
- A thin bead of latex caulk may be used around the edge where the shelf meets the door to prevent moisture penetration or the collection of dust.

View of back surface of Dentil Shelf

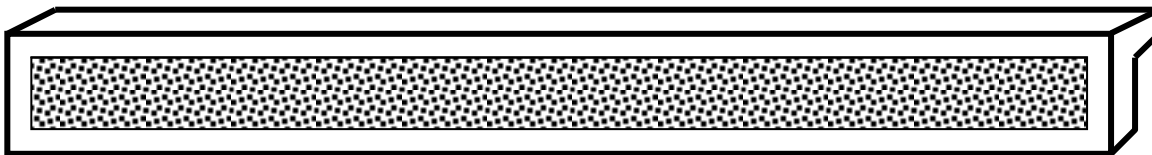

View of adhesive on Dentil Shelf with 1/4" perimeter of NO adhesive

